



STEP 1: FASTEN THE TELEPHONE SYSTEM TO THE WALL

Securely fasten the telephone system to the wall using proper mounting hardware. The telephone system needs to be placed in a location close to the D-MARC and Station Cable Block.

IMPORTANT! Remove the packing material from inside the phone system before powering on.

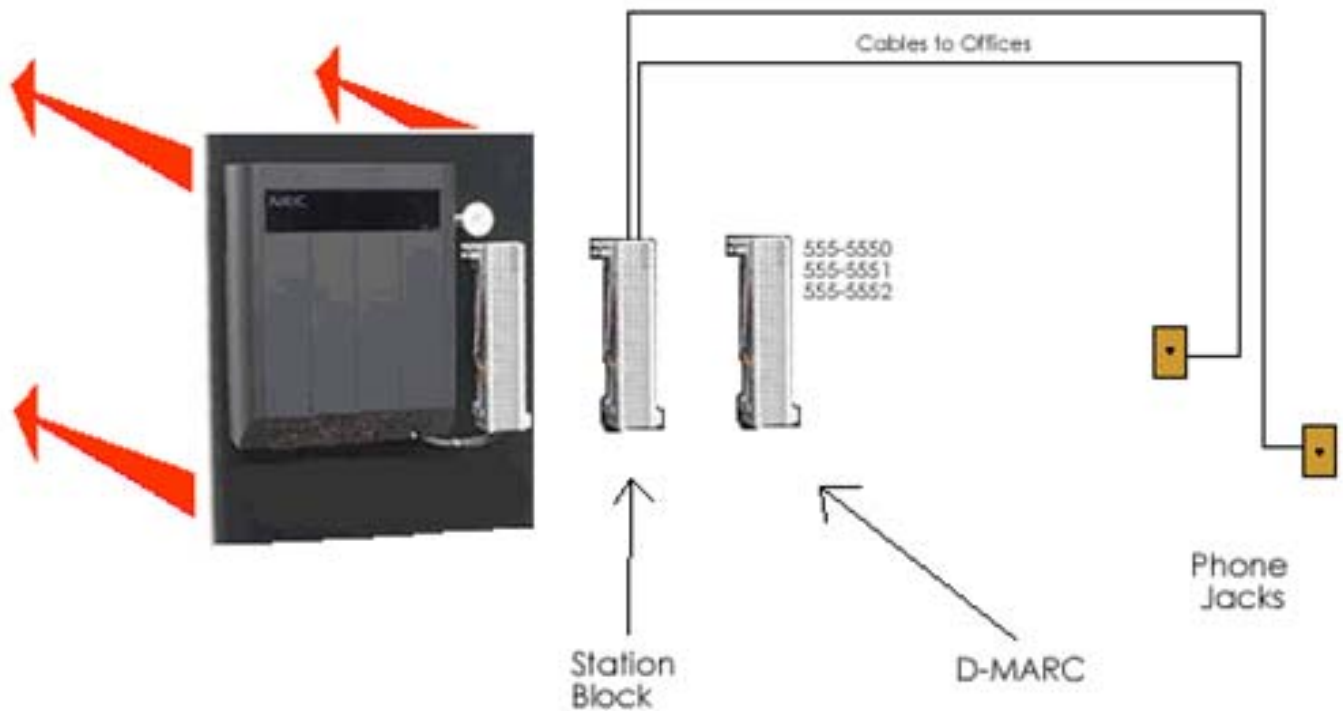

D-MARC: This is where your telephone company provides you access to your telephone lines. It will usually have an orange cover and your telephone numbers will be written somewhere on the block. Also called a RJ21X.

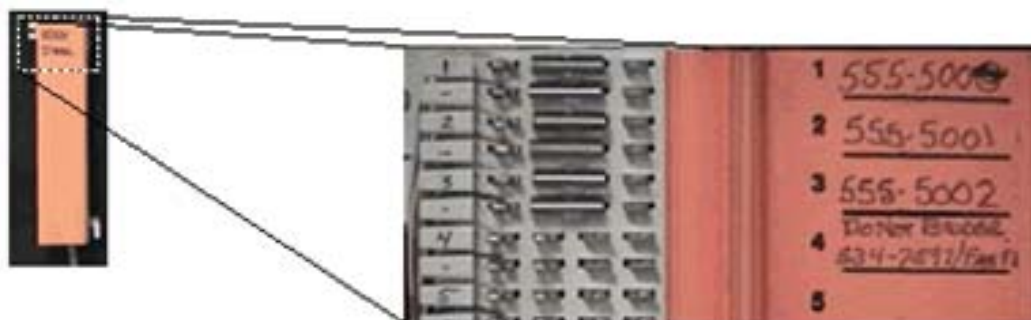

STATION CABLE BLOCK: This is the point of termination for the cables that run out to each of your offices. Station cables usually consist of 8 wires. These 8 wires work in pairs, each pair with its own color code. (white-blue pair, white-orange pair, white-green pair, white-brown pair). Most phone systems only require use of 1 pair (most often white-blue).