



STEP 2: CONNECT THE TELEPHONE EXTENSIONS

There should be a Cat 3 (or in some cases Cat 5) cable running from the phone room out to each office where a telephone will be located. In most cases this cable will be terminated on a 66-Block in the phone room and a telephone jack in each office. Locate the position on the Station Block that corresponds with the telephone jack where you want your first extension.

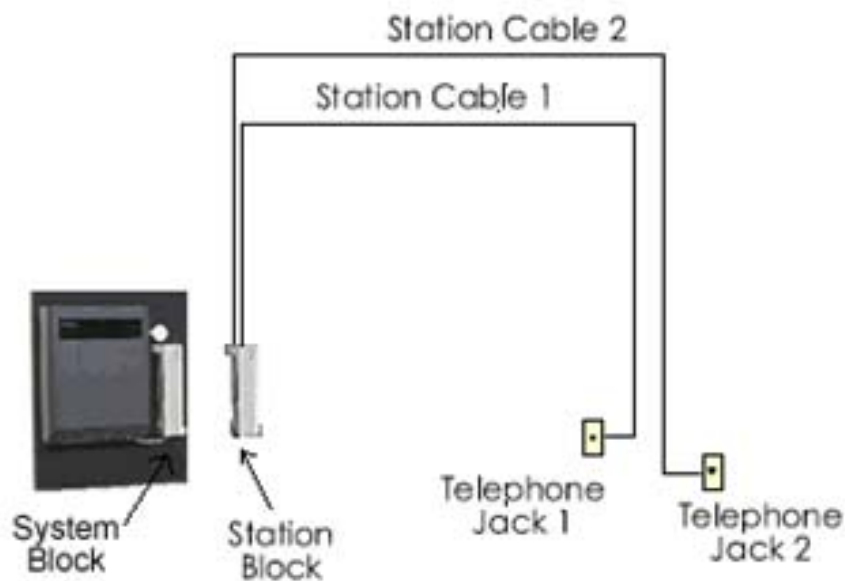

Each extension consists of 4 pins on the System Block. 2 Pins in Column A which are used for the system wires. The top pin in column B, called the TIP, and the bottom pin in column B, called the RING.

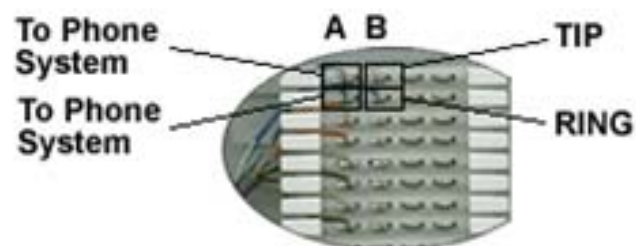

Connect the white jumperwire to Column B, TIP.
Connect the blue jumperwire to Column B, RING.
Route the other end of the jumperwire over to the Station Block and connect it to the pins corresponding to the extension you are activating.

