


STEP 3: CONNECT THE TELEPHONE LINES

Locate your main telephone number on the D-MARC. Columns A and B on the D-MARC are reserved for phone company use and should not be used. Column C and D are for customer use. In most cases the phone company will terminate their wires on column A, you will terminate your wires on Column D and a metal clip will connect Columns B and C.

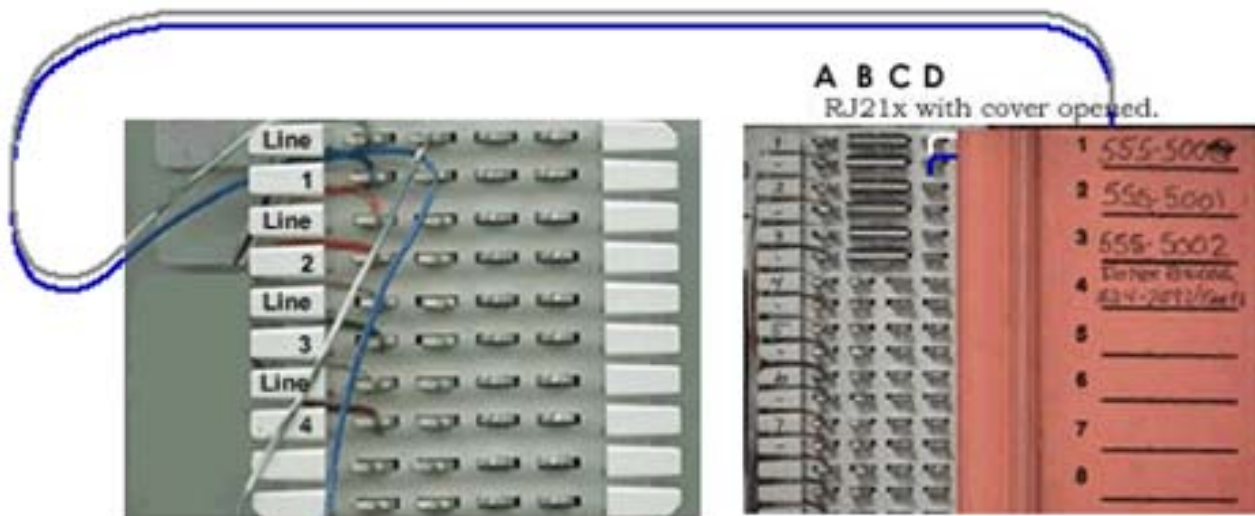


Each phone number consists of a top pin, known as the TIP and a bottom pin, known as the RING. Connect the white jumperwire to the TIP in column D for your first phone number. Connect the blue jumperwire to the RING in column D for your first phone number.

NOTE: YOU MAY NEED TO REMOVE THE ORANGE COVER



Route the other end of the jumperwire over to the System Block and connect the white jumperwire to the top pin of LINE 1. Connect the blue jumperwire to the bottom pin of LINE 1.

If your phone lines are located on the left side of the System Block you will connect to column B. If your phone lines are located on the right side of the System Block you will connect to column C.

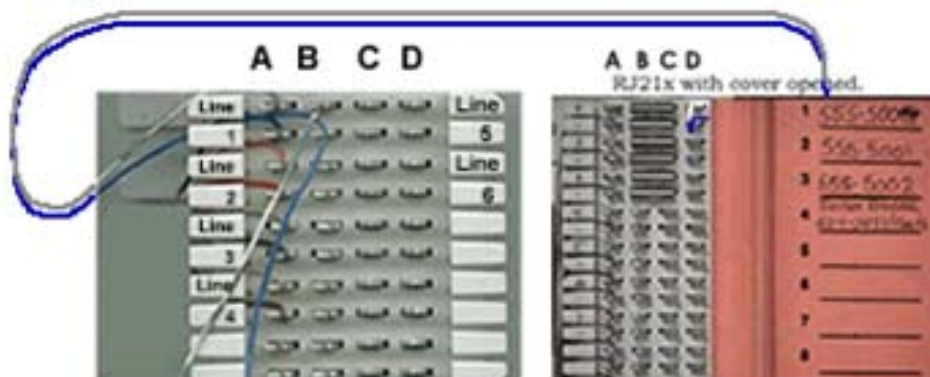

Repeat this step for each of your phone lines.